



## Cleaning instructions for the Expand LightBox graphic (fabric)

### What you need:

- **Magic eraser** (melamine foam)  
SE: melaminsvamp / magisk rengöringssvamp, DE: Schmutzradierer, FR: gomme magique / éponge magique.
- **Miracle cloth**  
SE mikrofiberduk/mirakeltrasa, DE: Mikrofaser(tuch)/Wunderlappen/Zaubertuch). France (FR): chiffon microfibre/chiffon magique
- **Spray bottle with clean water** (for **light** misting only)
- **White, lint-free microfiber cloths**
- **Nitrile gloves** (optional)

### Preparation

1. Lay fabric flat, print side up, on a clean, dry surface.
2. Dust off with a dry microfiber cloth.
3. **Test first** in a hidden corner to confirm no color lift or sheen.

### Guide depending on stain

1. **Fresh surface dirt (just happened) → Miracle cloth (dry)**  
One-direction, light strokes. No water.
2. **Still visible? → Magic eraser (dry)**  
Very light pressure; short strokes from outside → in.
3. **Stubborn spot remains? → Magic eraser (lightly damp)**  
Mist the **eraser**, not the fabric. Blot dry immediately.
4. **If still not clean → Stop.** Do **not** increase pressure or use chemicals.



## Cleaning Steps

1. **Default: Dry magic eraser**  
Feather-light pressure; short, straight strokes; avoid circles.
2. **Optional: Lightly damp magic eraser**  
Foam should feel **barely** damp. Work locally, then blot with a dry white microfiber cloth.
3. **Air-dry flat** before rolling or rehanging.

### Do's

- Keep moisture minimal: aim for "almost dry."
- Use multiple gentle passes rather than force.
- Let fully dry before packing or installing.

### Don'ts

- Don't soak fabric or silicone edge.
- Don't use detergents, solvents, bleach, or alcohol.
- Don't scrub in circles or with heavy pressure.
- Don't heat-dry (no hairdryers, no direct sun).

## Handling & Storage

- After drying, roll **print side out** around a clean core; sleeve/bag for protection.
- Store cool, dry, away from sunlight and pressure points.