




Expand LightBox roof with ELB and EGF wall Set-up Instruction (A108-1)

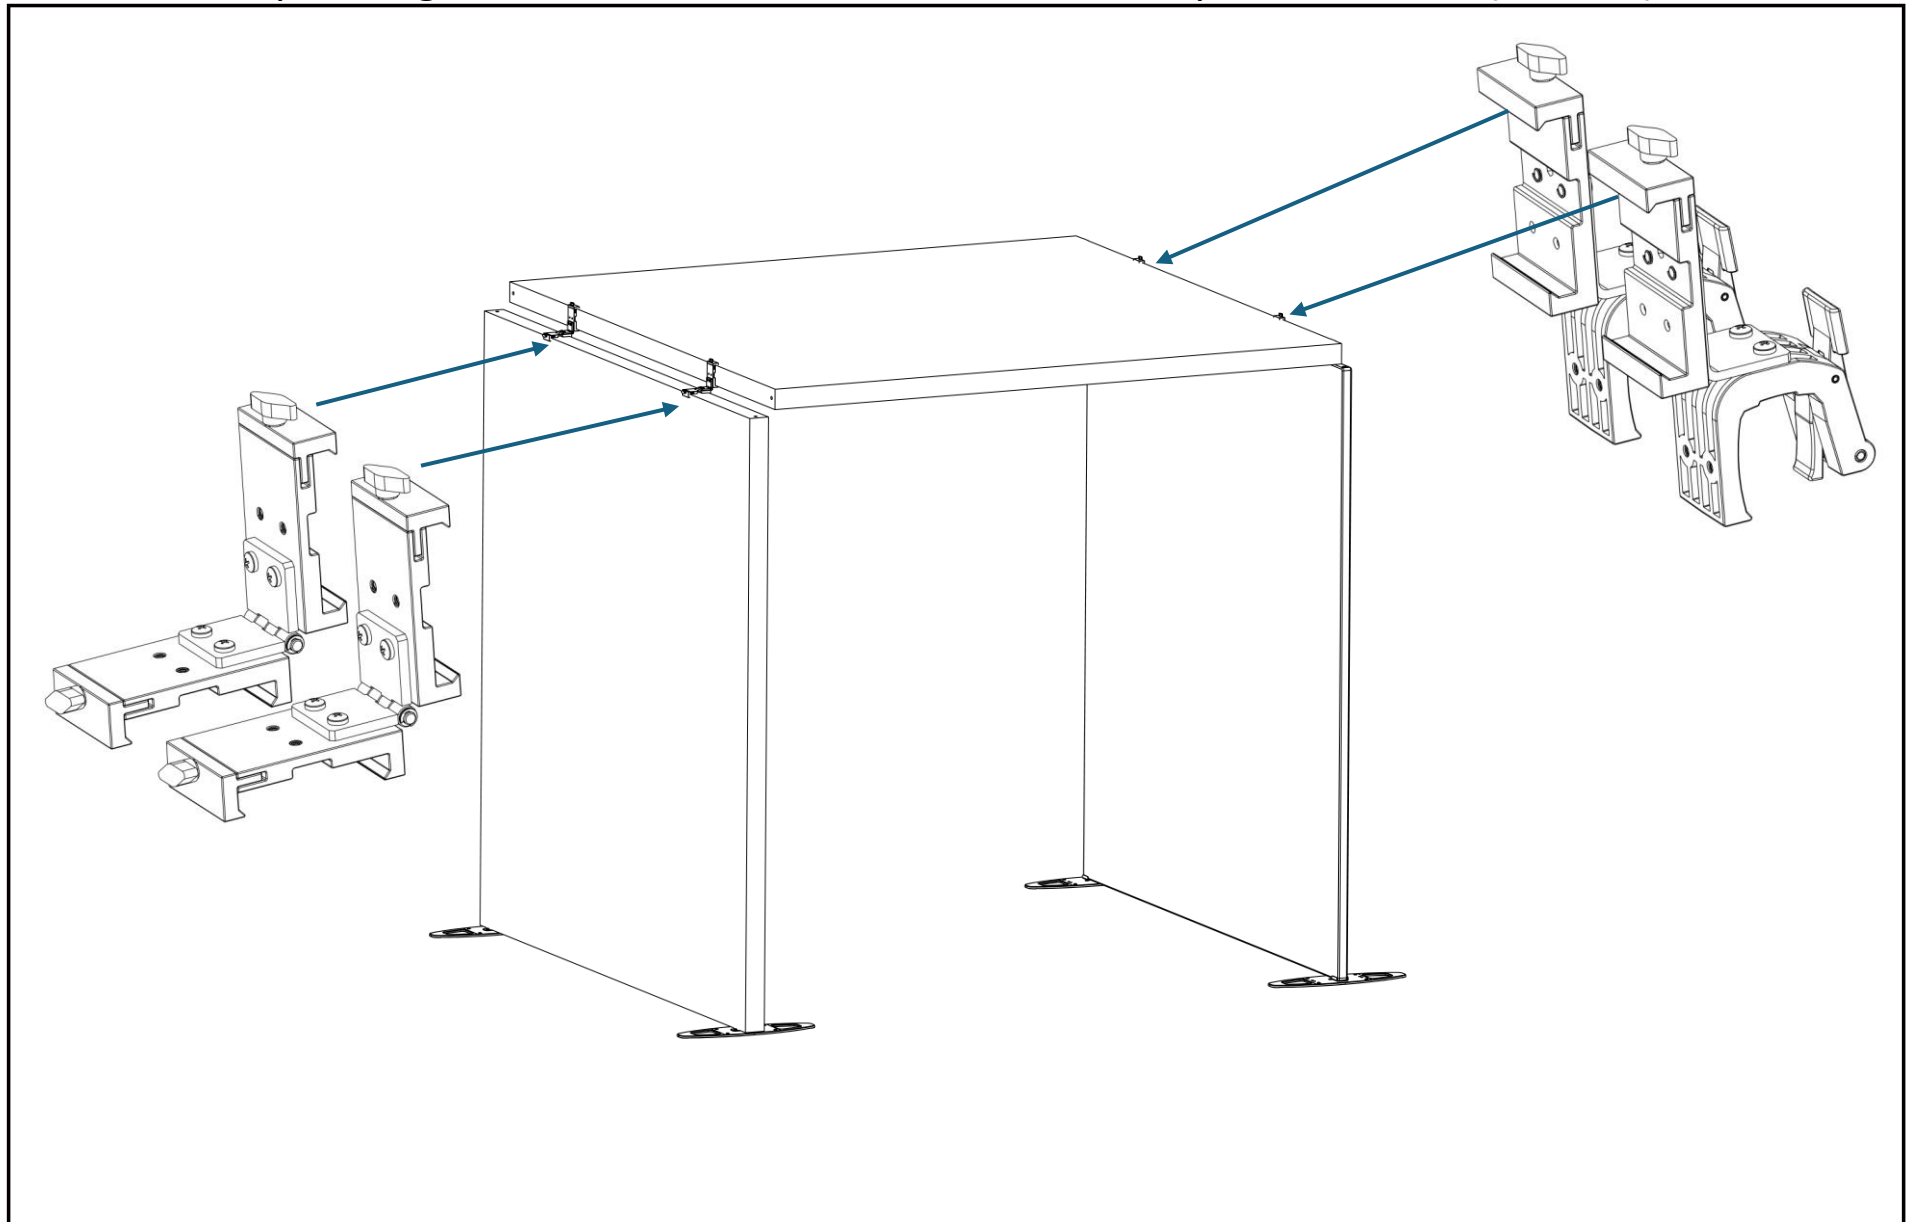


Expand LightBox roof with ELB and EGF wall Set-up Instruction (A108-1)

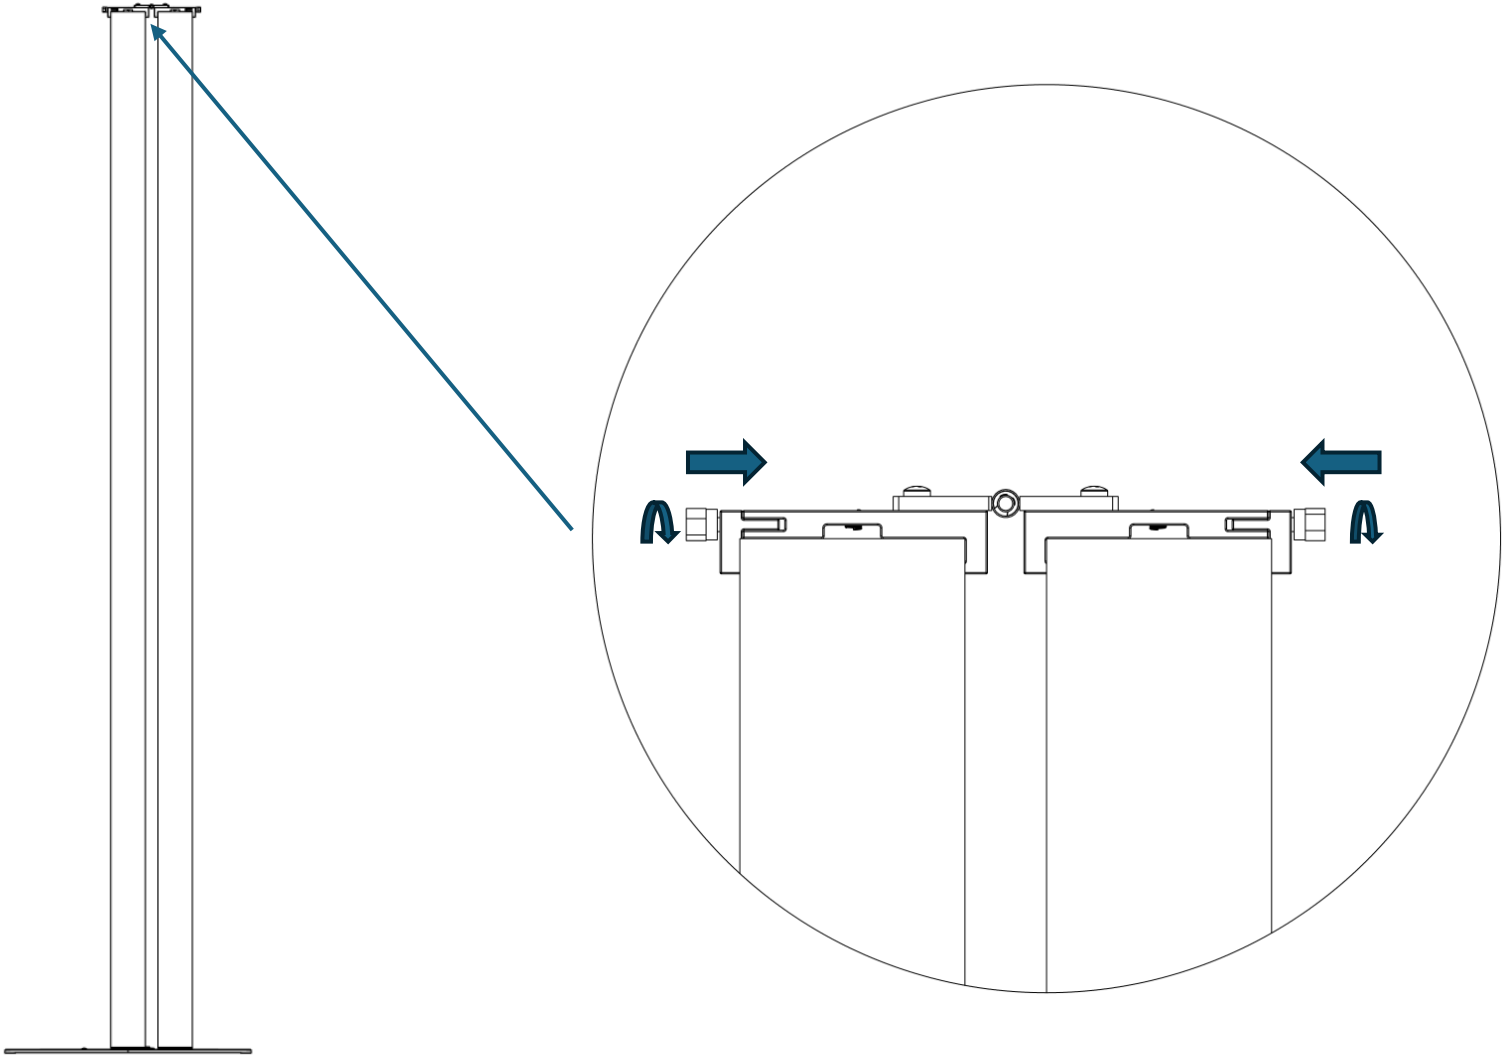


Expand LightBox roof with ELB and EGF wall Set-up Instruction (A108-1)

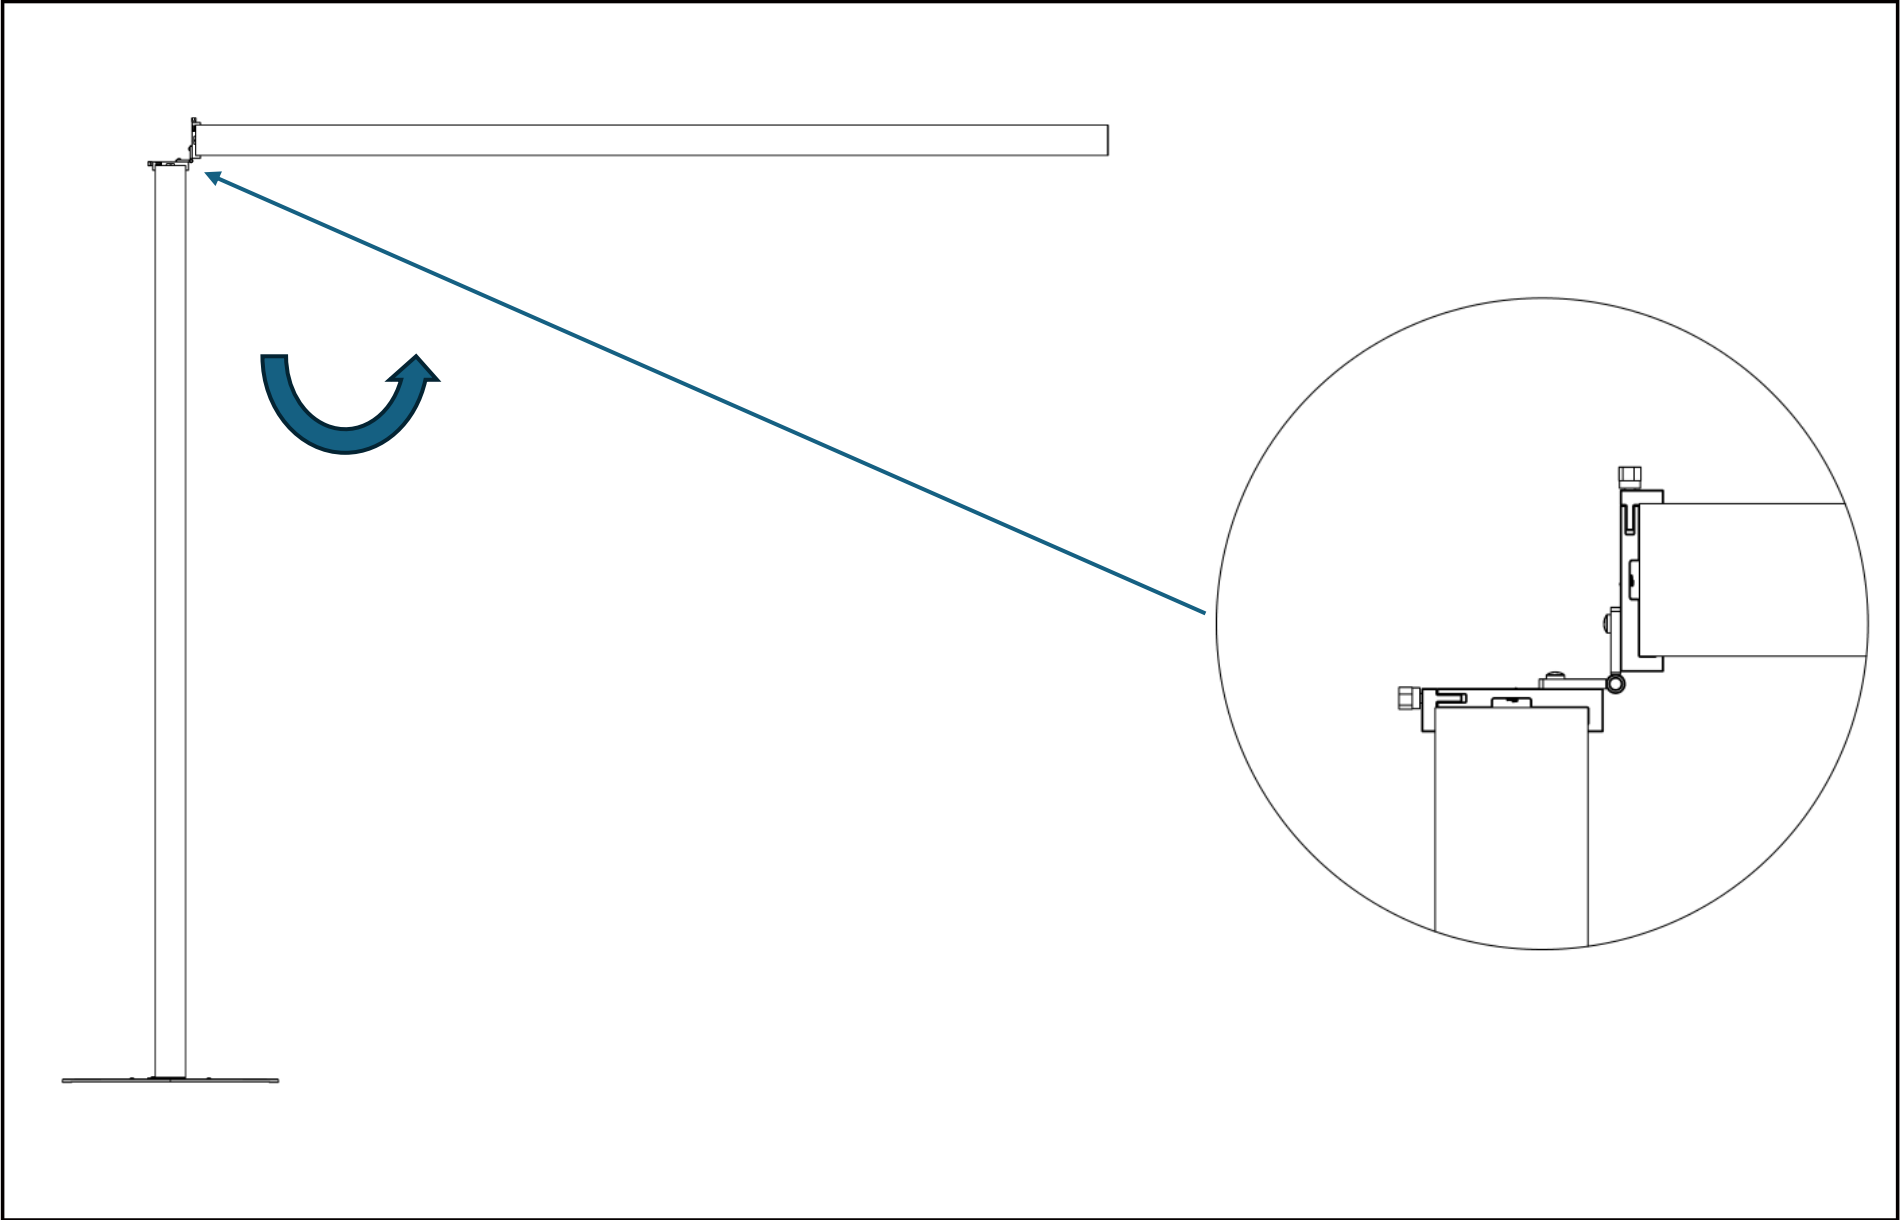

Expand LightBox roof with ELB and EGF wall Set-up Instruction (A108-1)

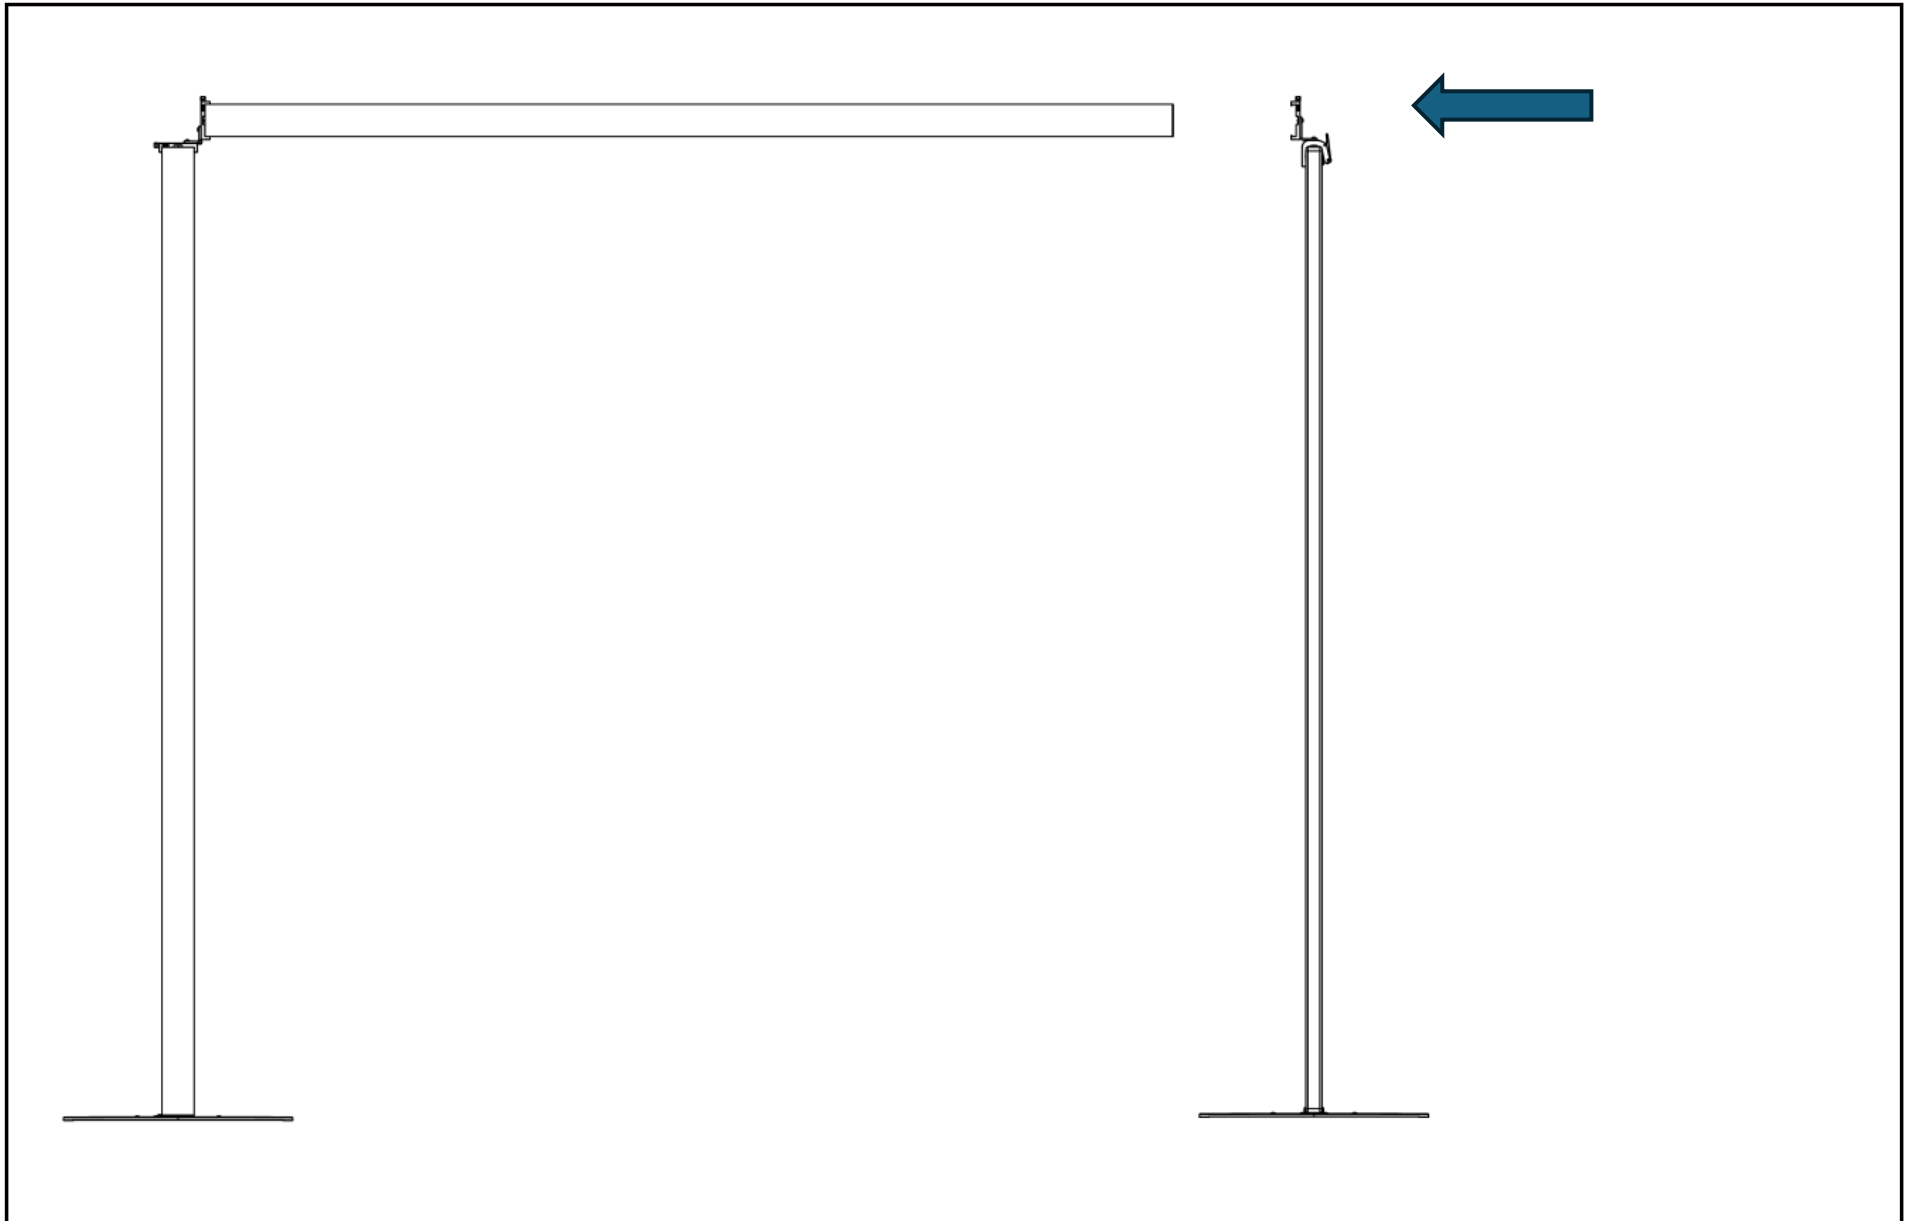

Expand LightBox roof with ELB and EGF wall Set-up Instruction (A108-1)

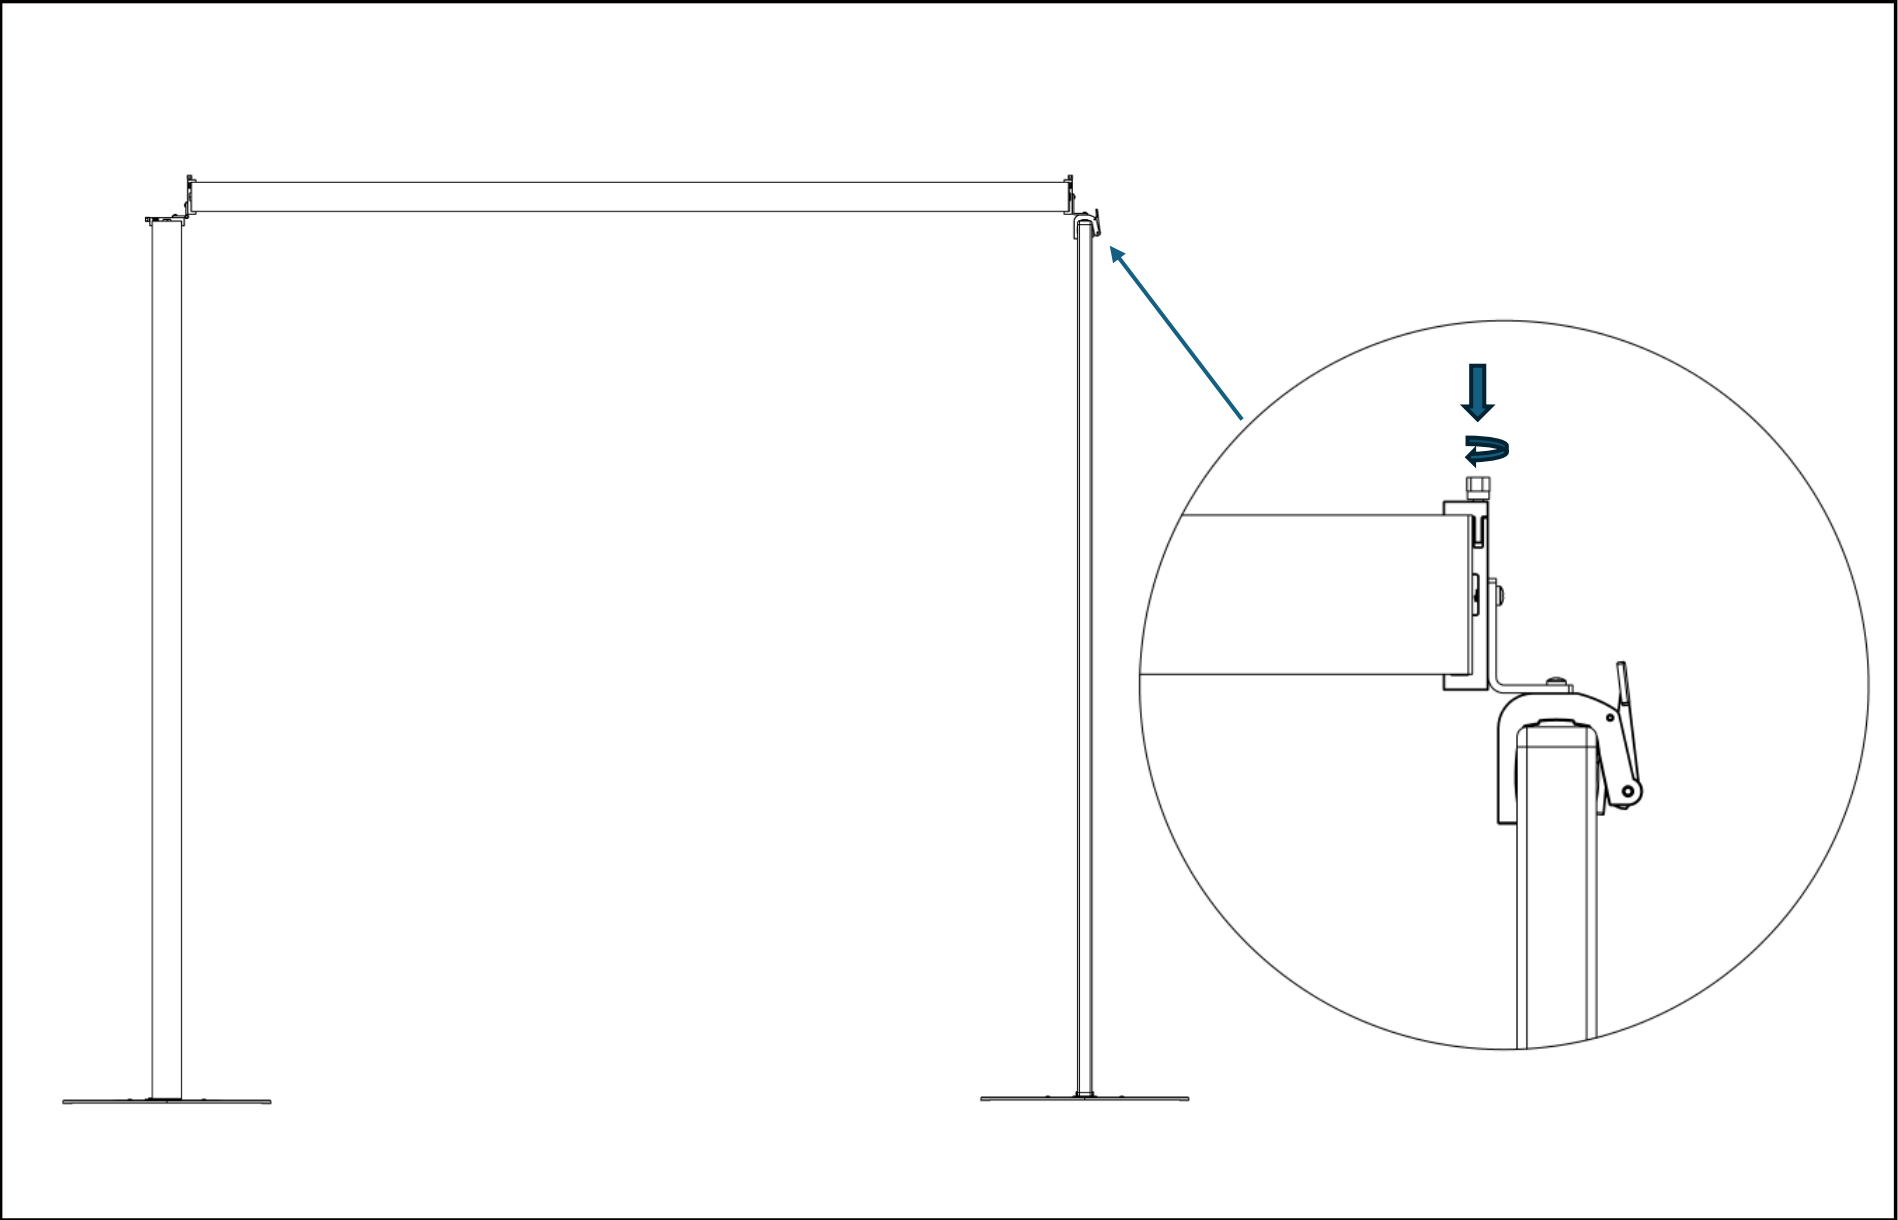

Expand LightBox roof with ELB and EGF wall Set-up Instruction (A108-1)

