




Expand GrandFabric roof with ELB and EGF wall Set-up Instruction (A108-4)

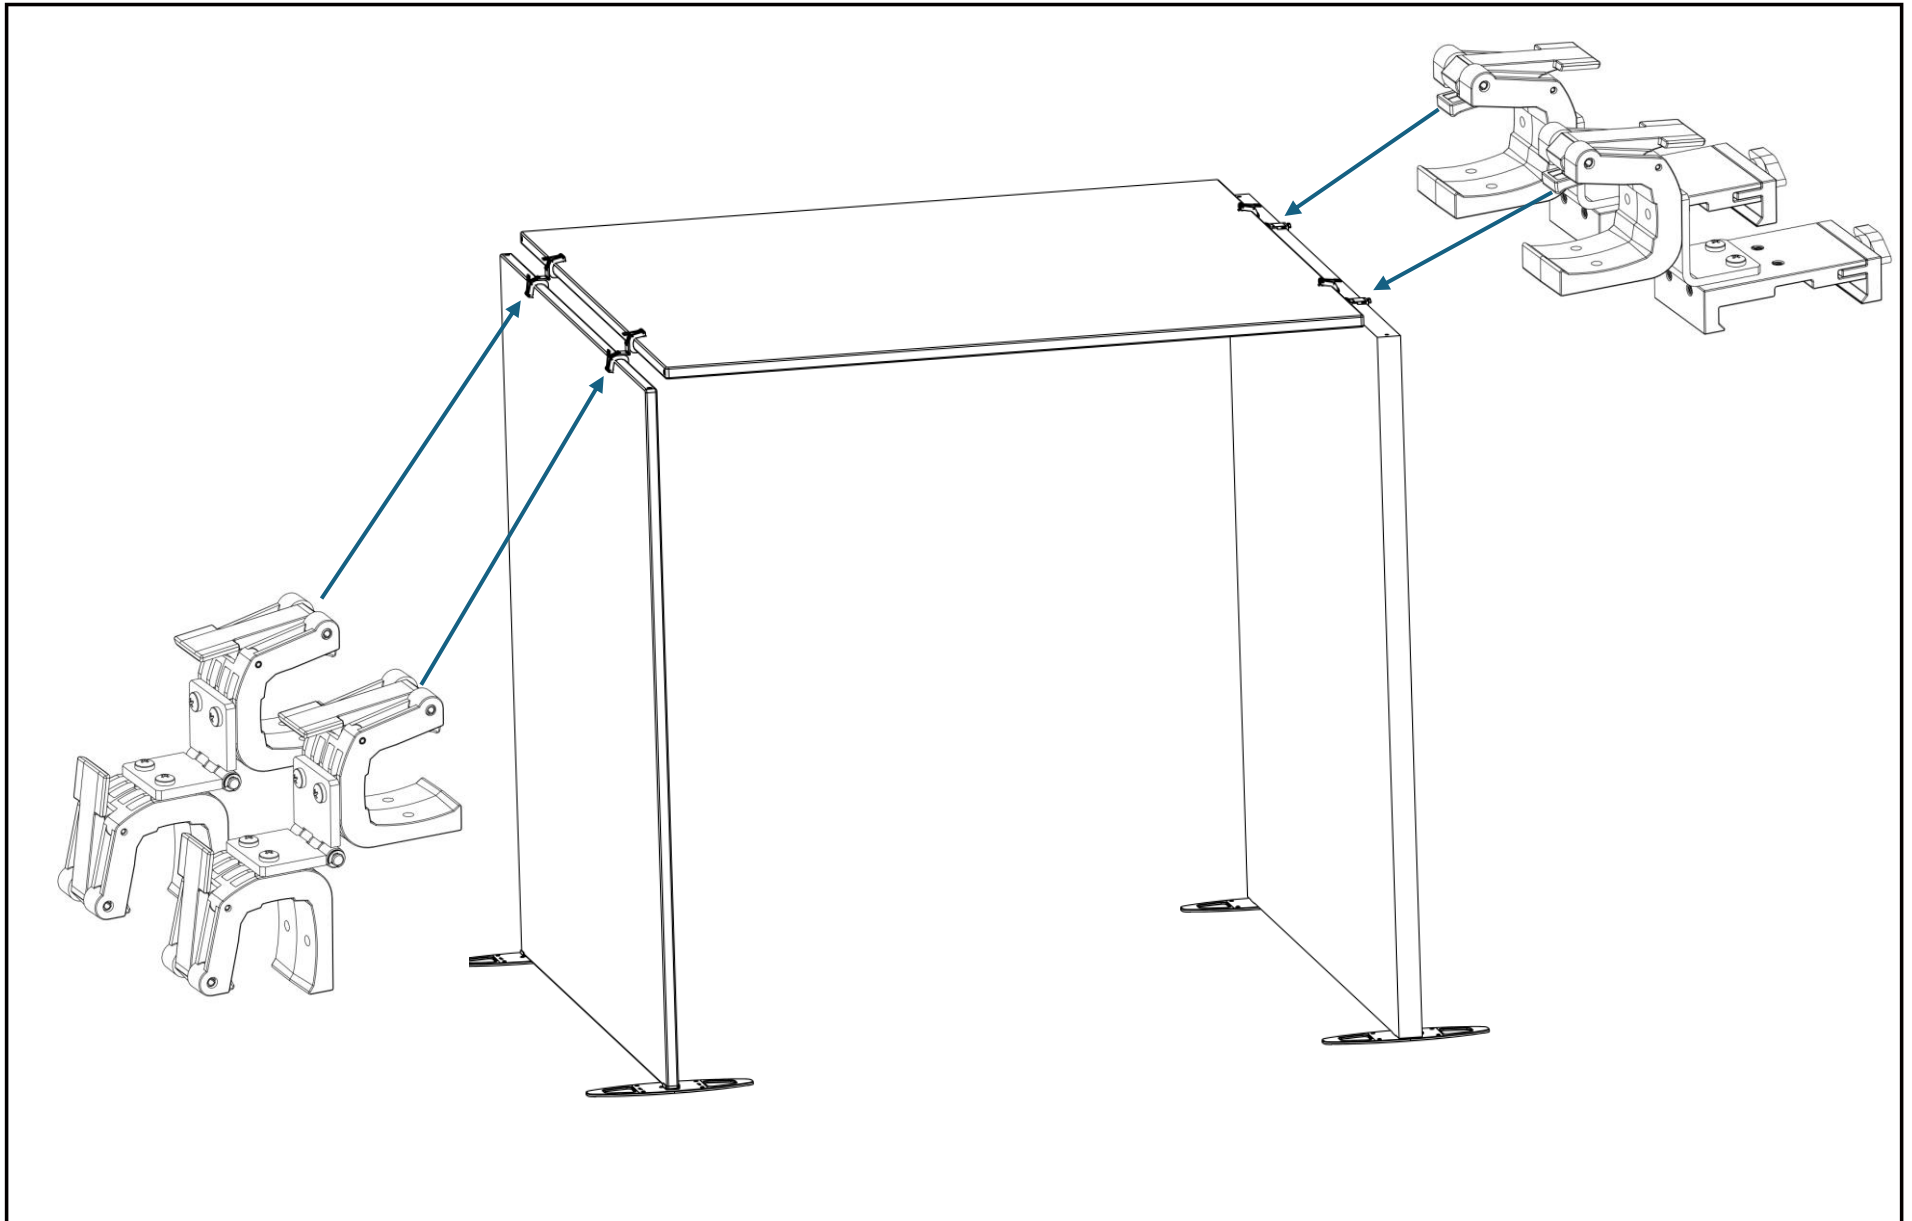


Expand GrandFabric roof with ELB and EGF wall Set-up Instruction (A108-4)

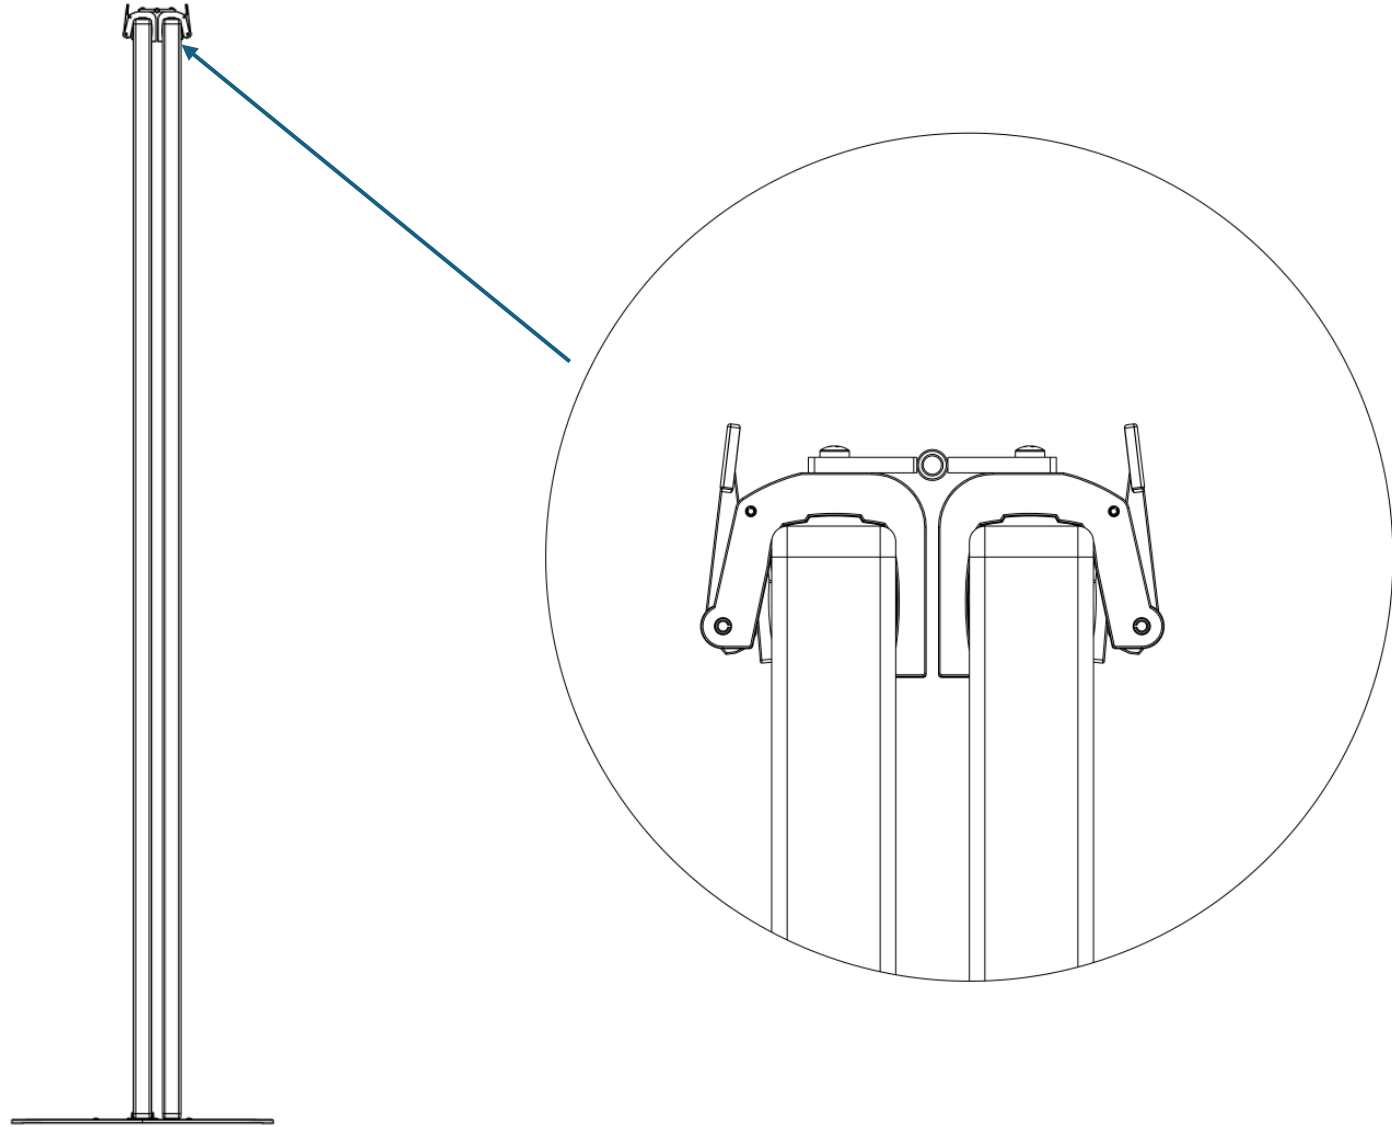


Expand GrandFabric roof with ELB and EGF wall Set-up Instruction (A108-4)

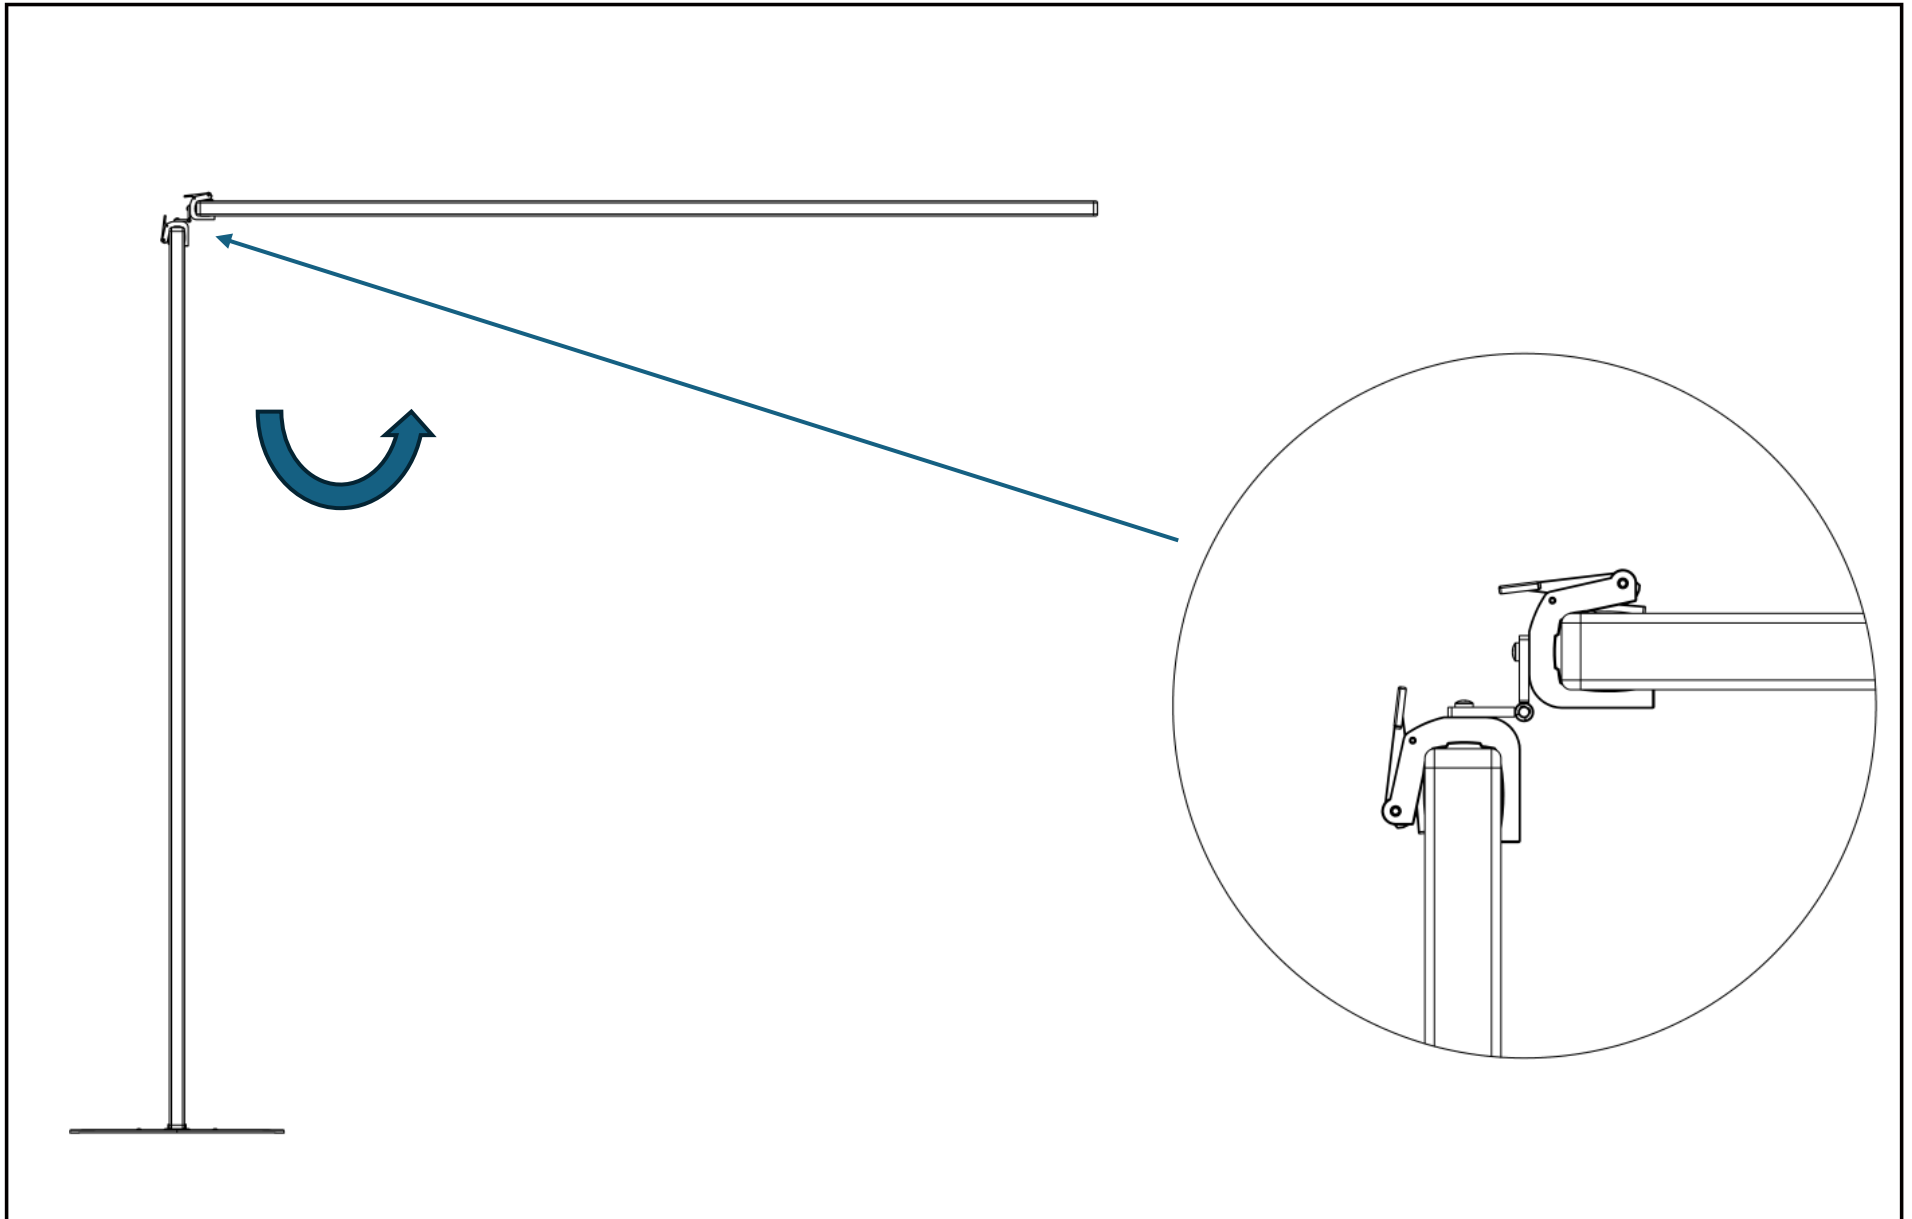

Expand GrandFabric roof with ELB and EGF wall Set-up Instruction (A108-4)

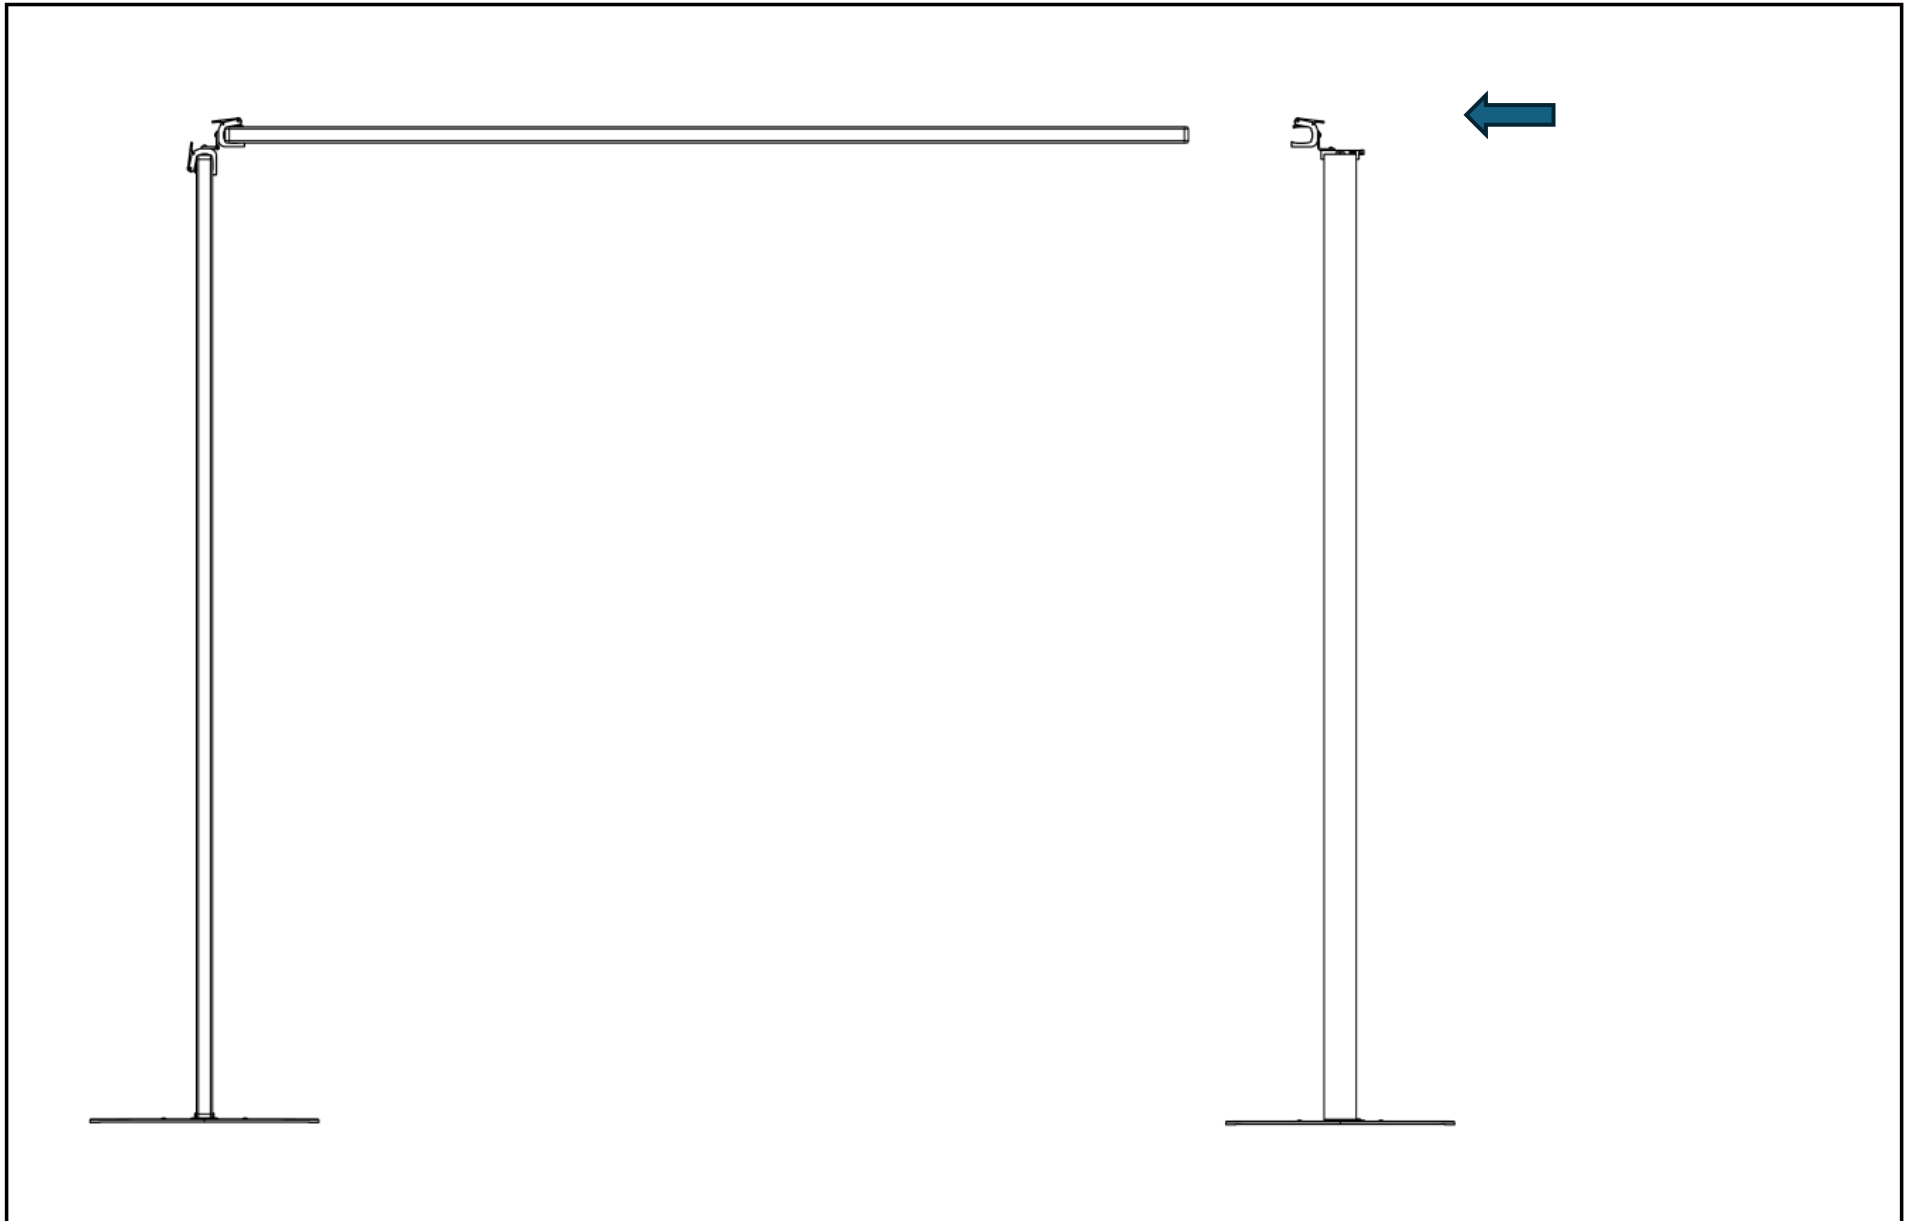

Expand GrandFabric roof with ELB and EGF wall Set-up Instruction (A108-4)

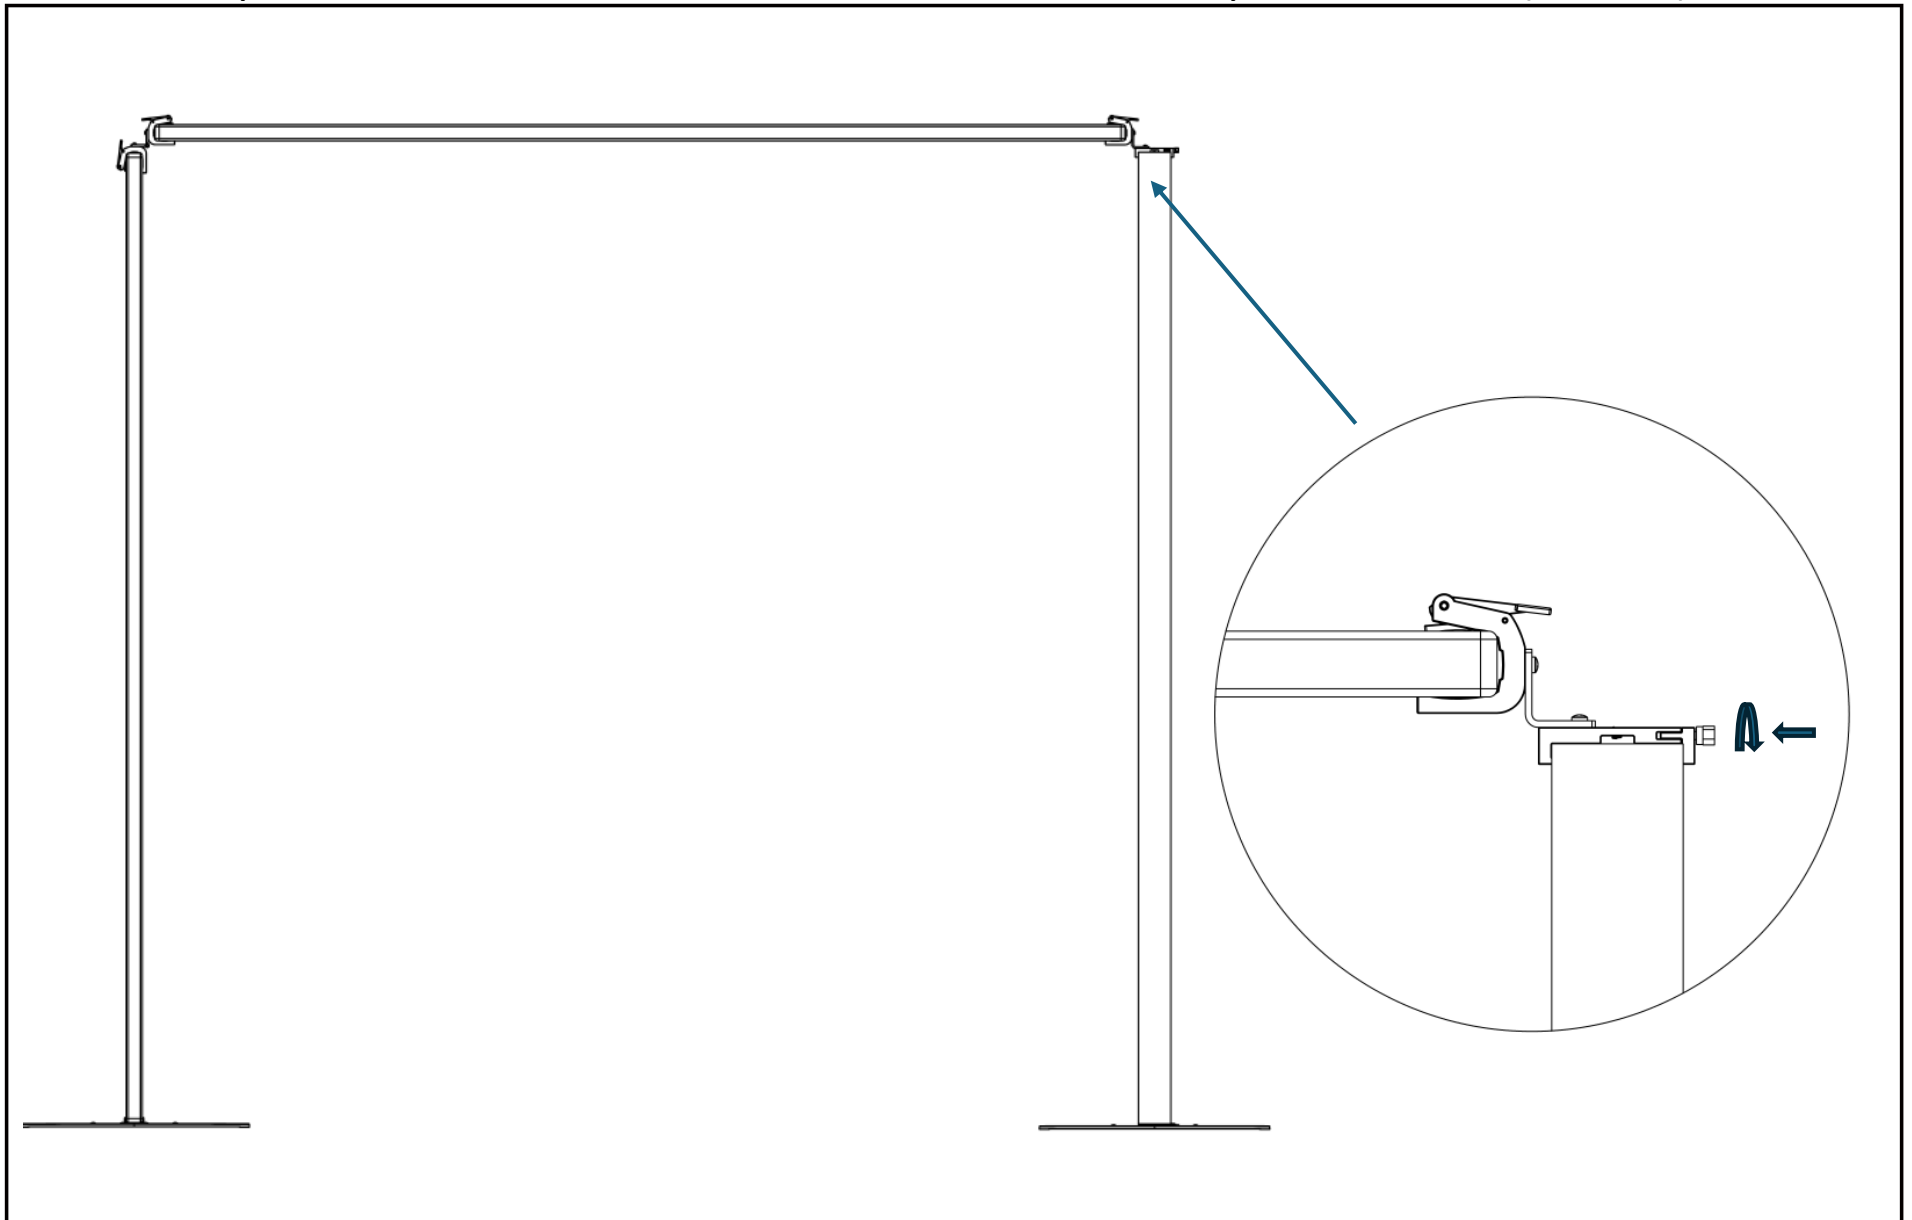

Expand GrandFabric roof with ELB and EGF wall Set-up Instruction (A108-4)

