




Expand LightBox roof with 2 EGF walls Set-up Instruction (A108-2)

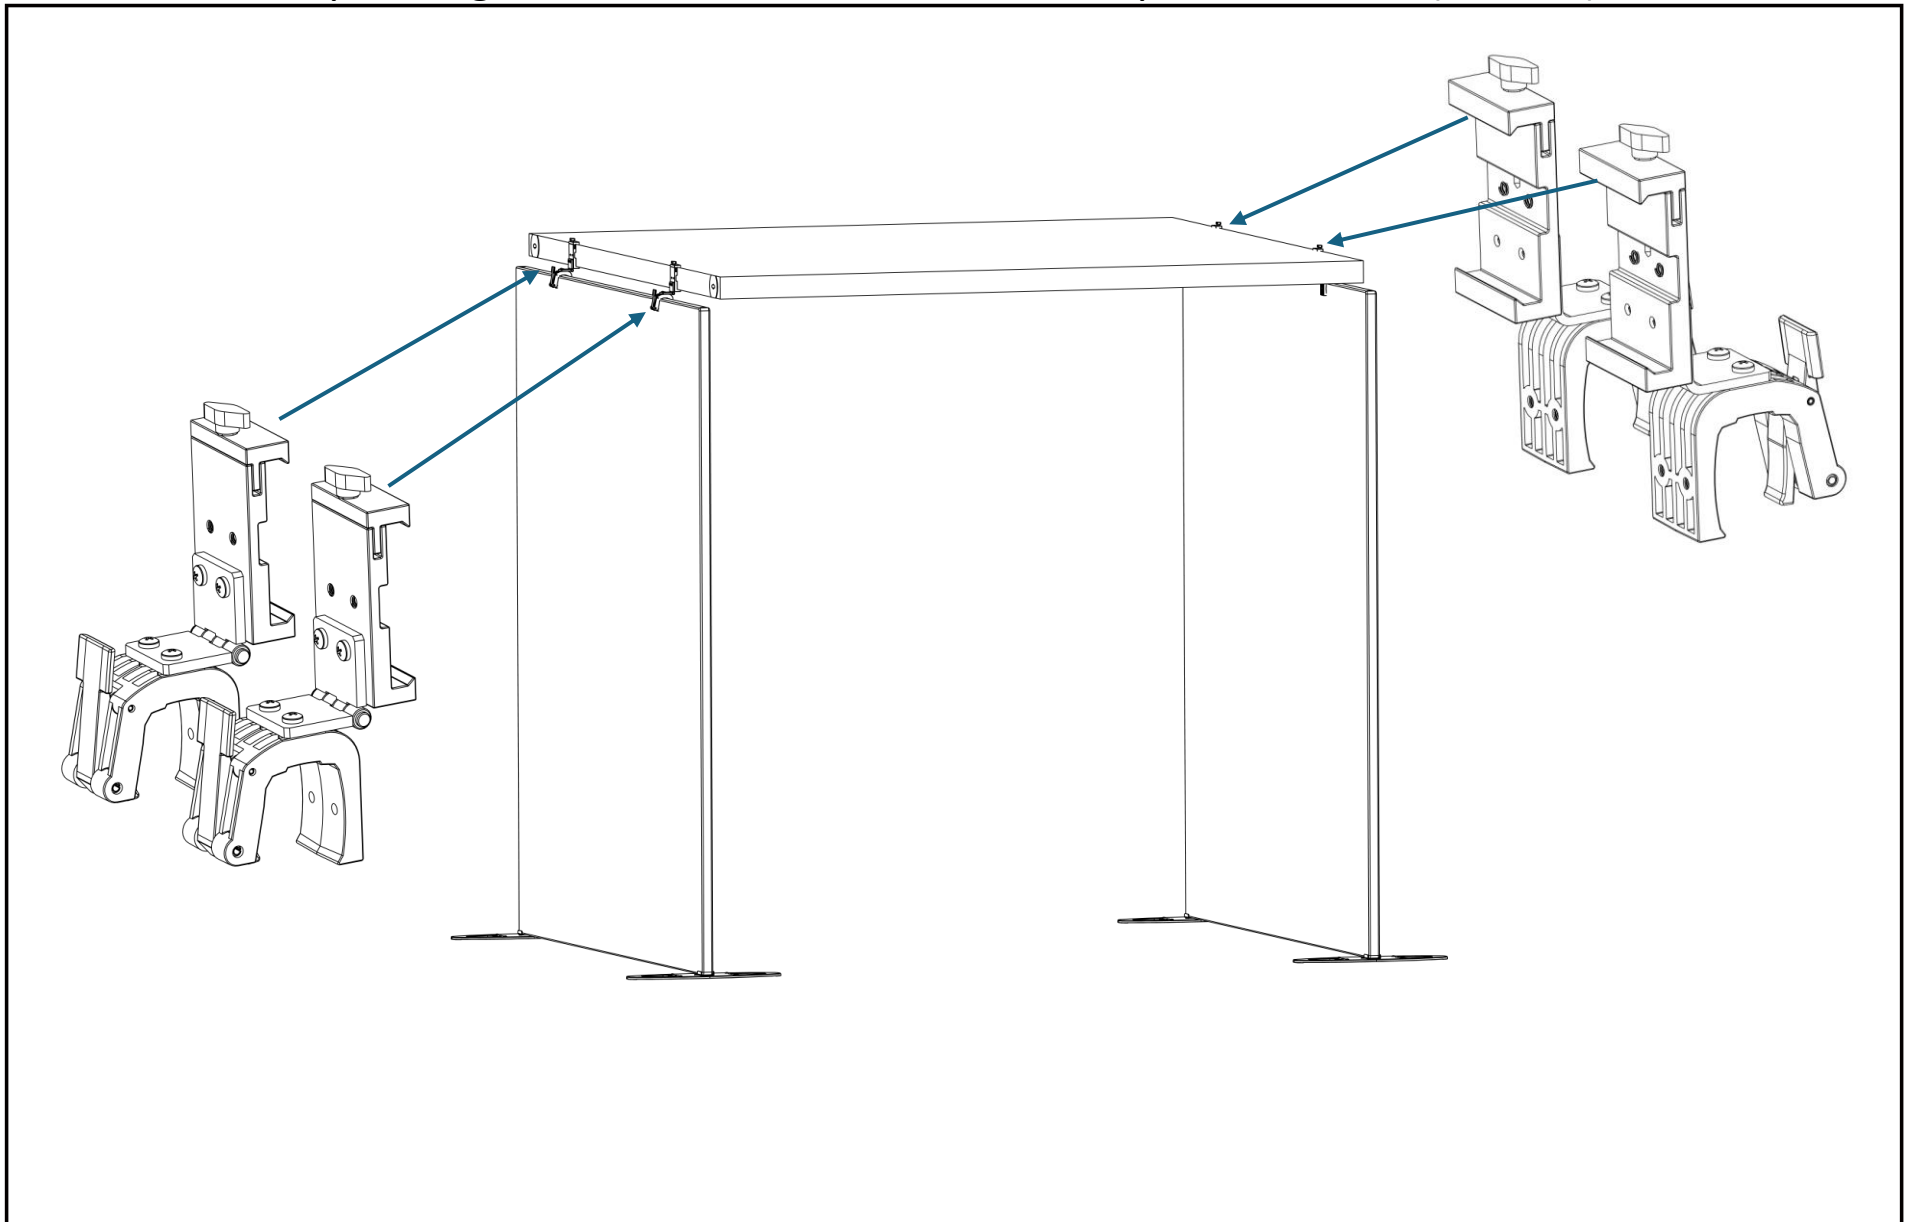


Expand LightBox roof with 2 EGF walls Set-up Instruction (A108-2)

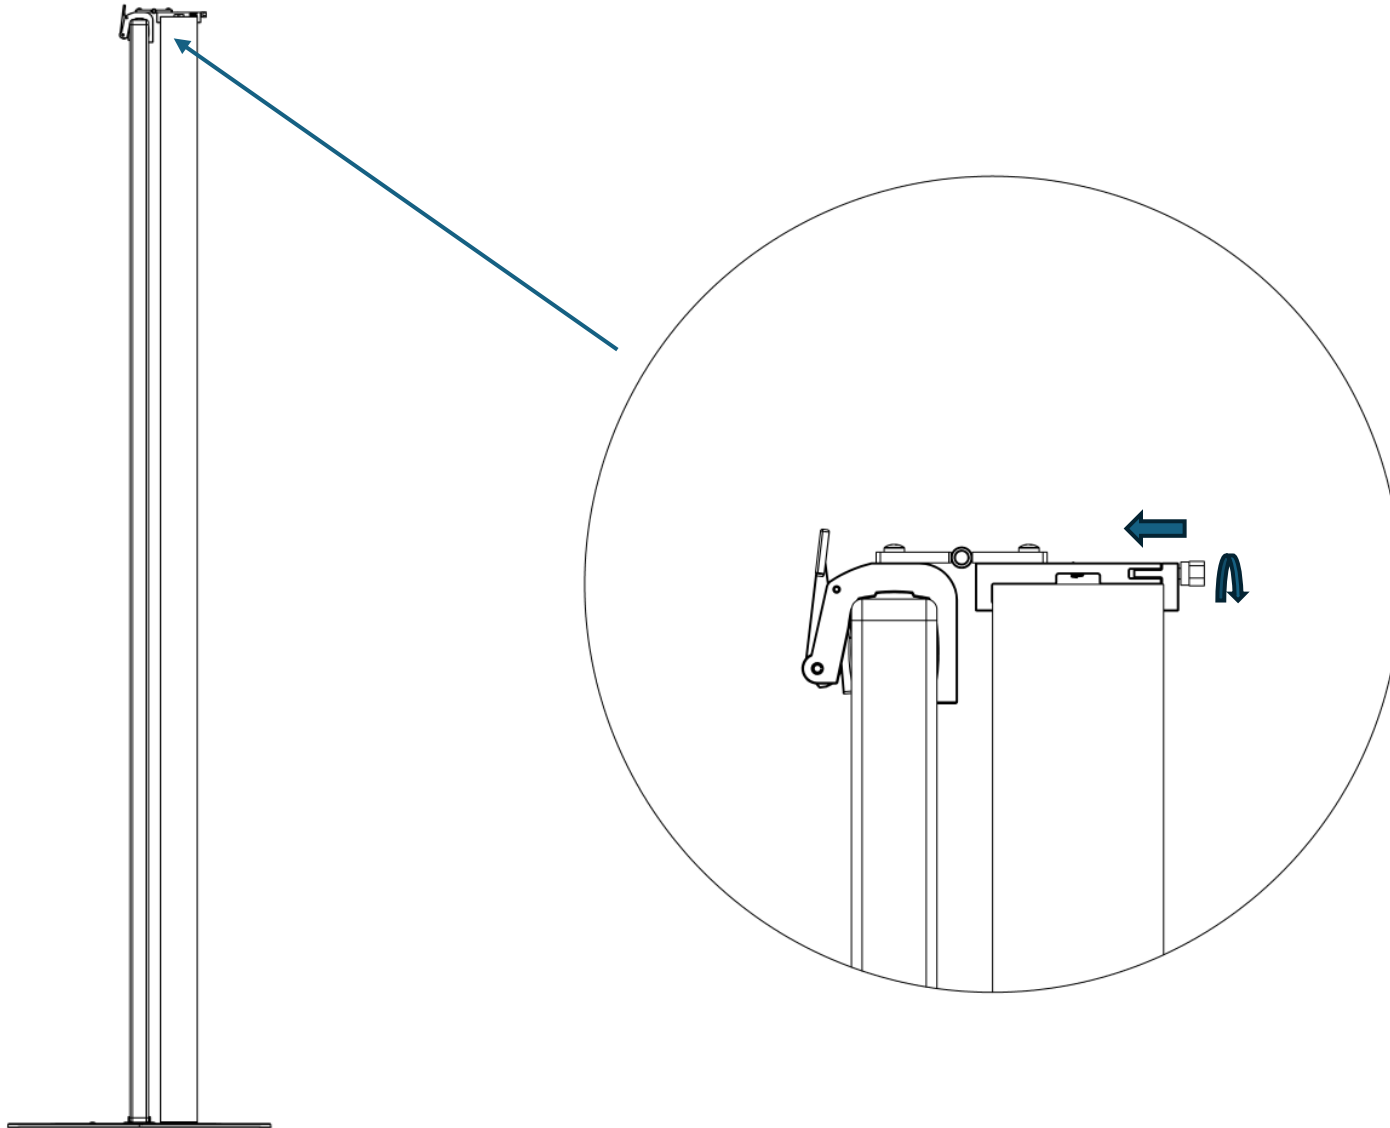


Expand LightBox roof with 2 EGF walls Set-up Instruction (A108-2)

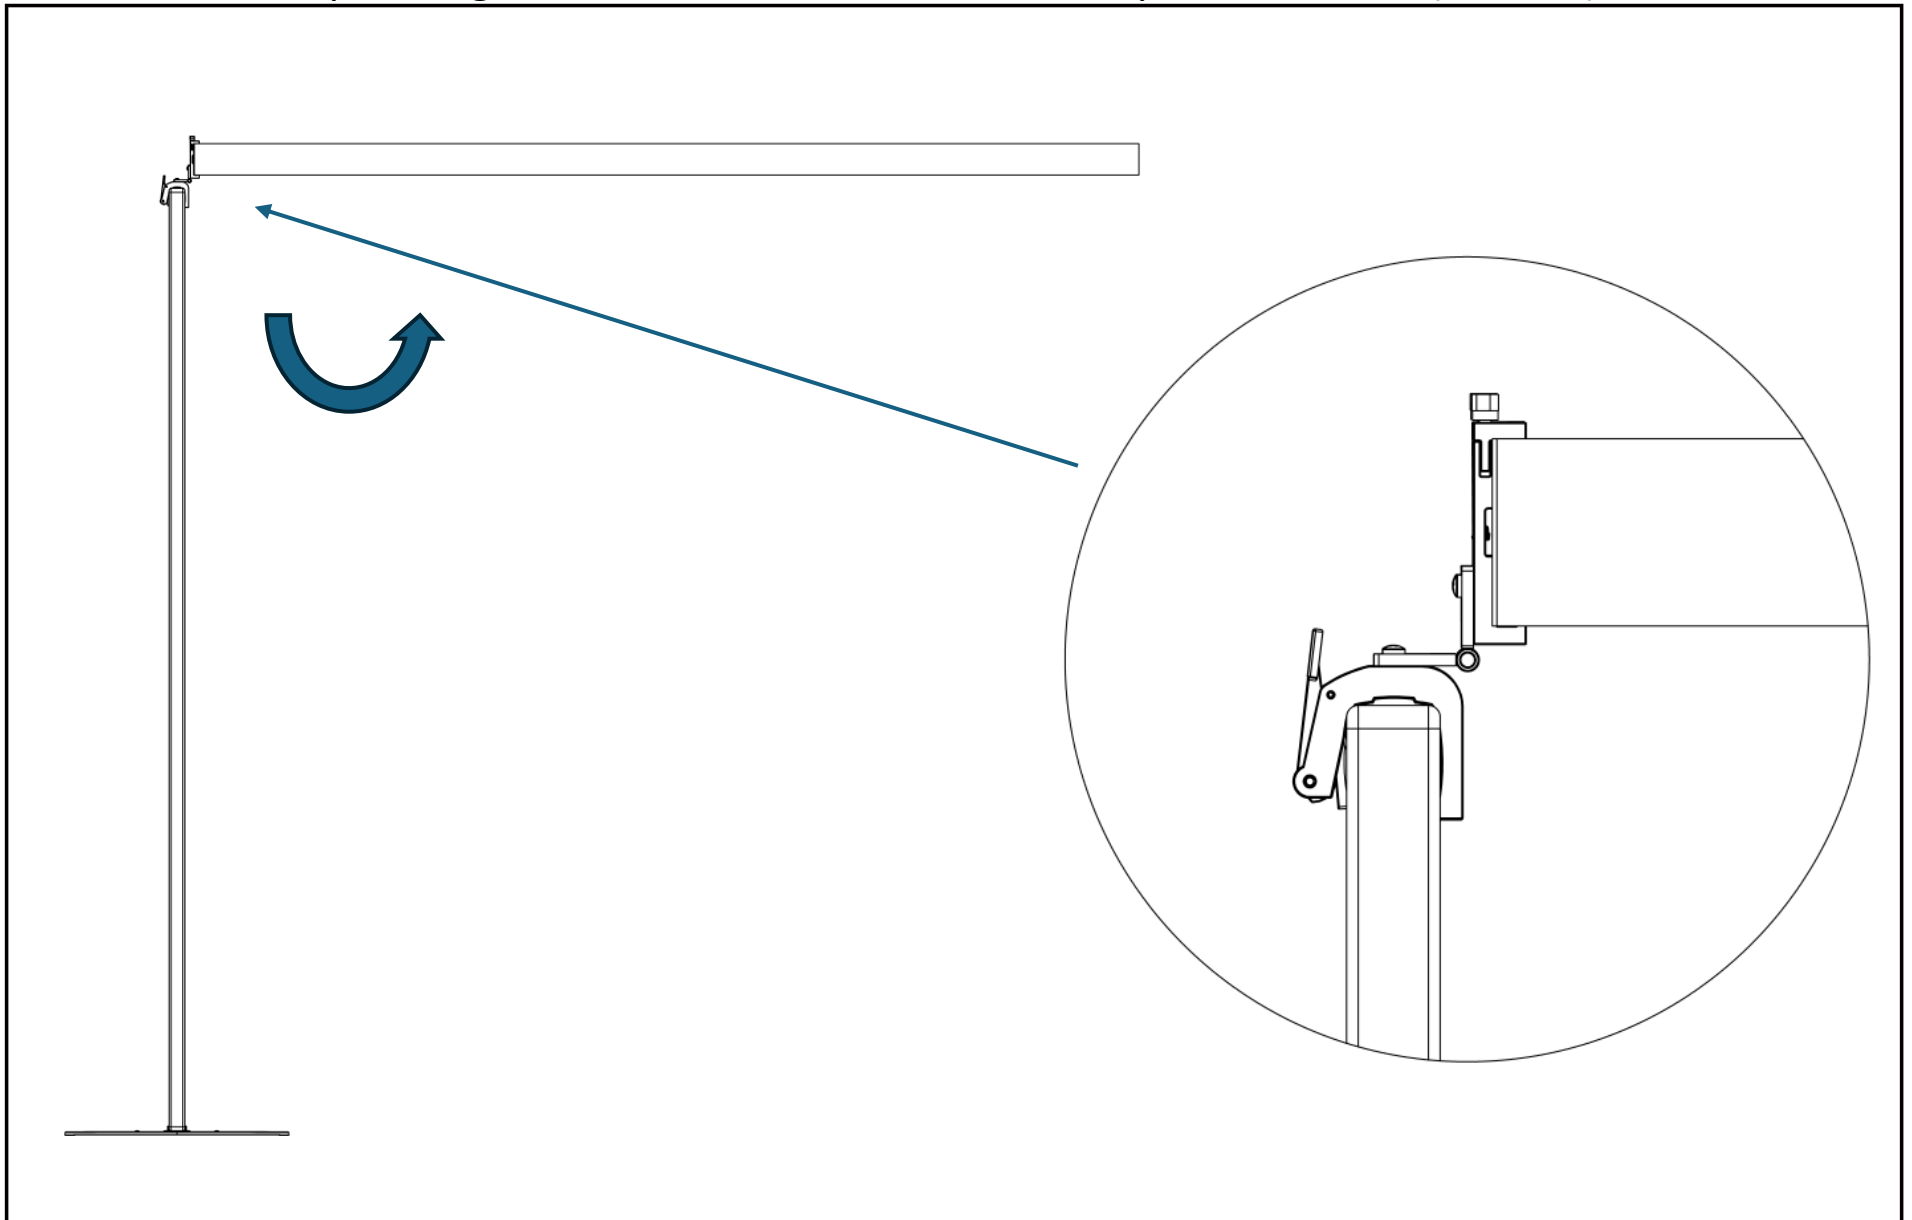

Expand LightBox roof with 2 EGF walls Set-up Instruction (A108-2)

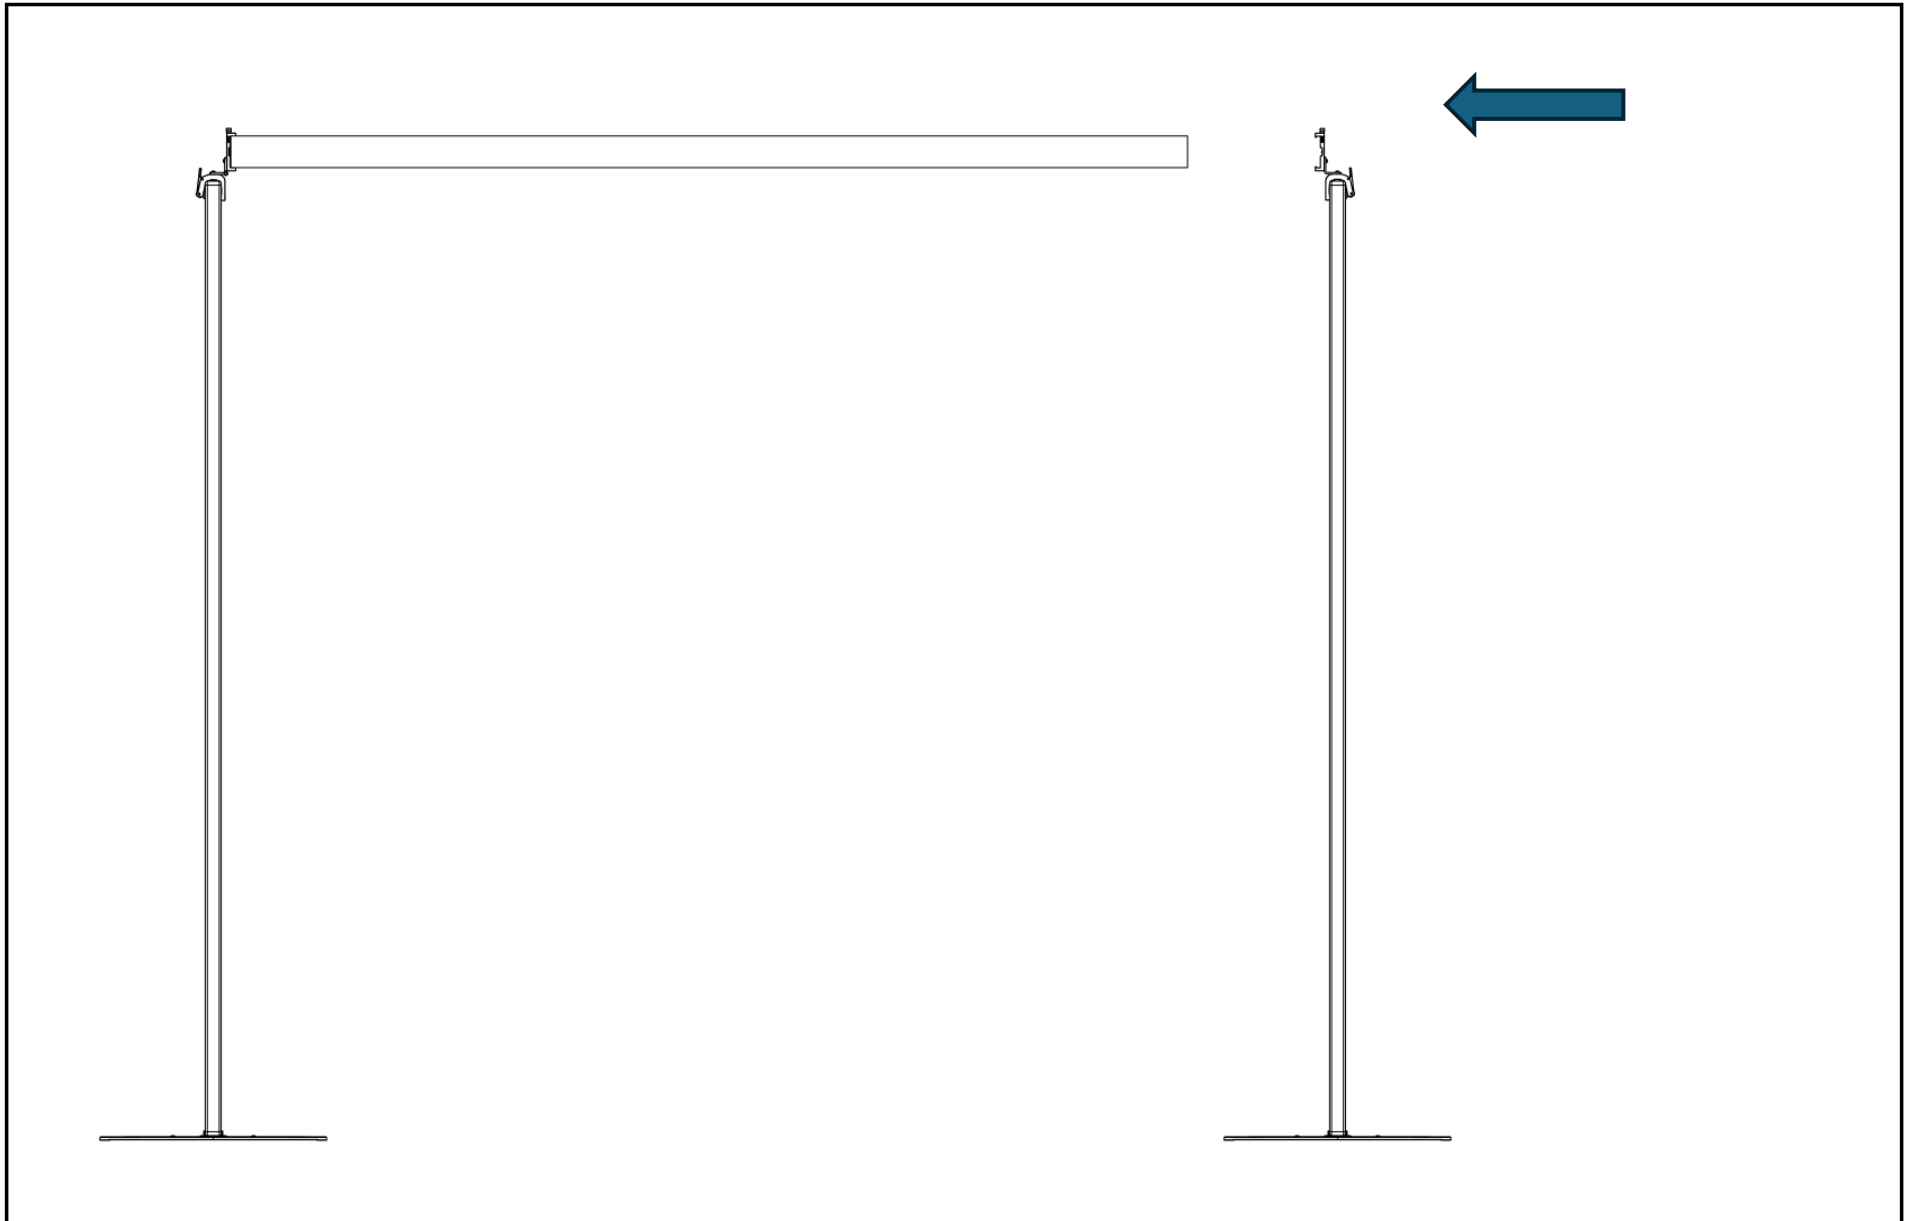

Expand LightBox roof with 2 EGF walls Set-up Instruction (A108-2)

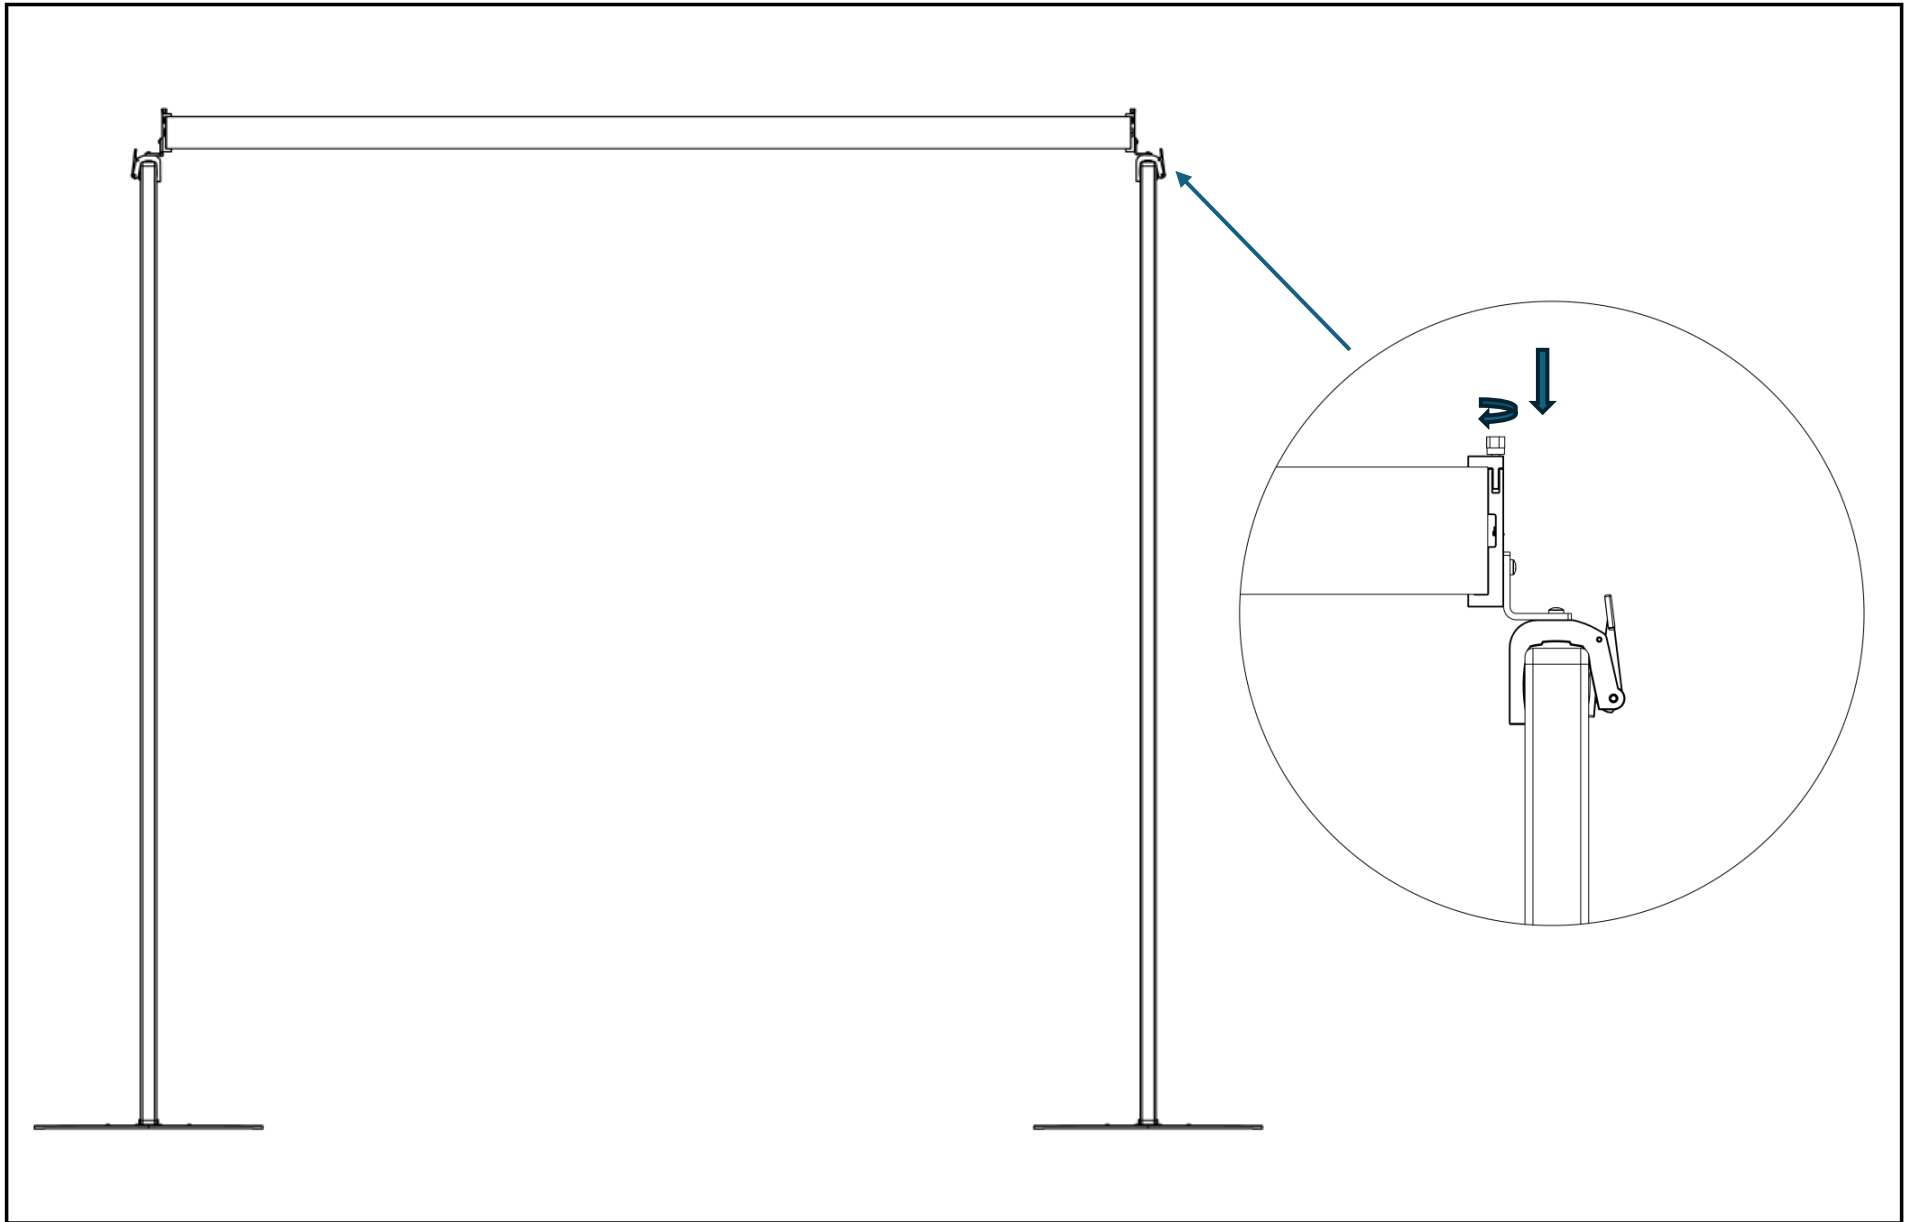

Expand LightBox roof with 2 EGF walls Set-up Instruction (A108-2)

